


TRANSMITTER SPECIFICATIONS

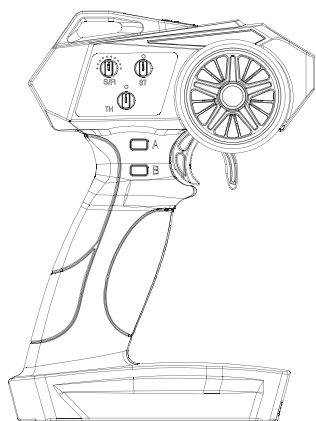

Model: BX300

Channel: 3CH



Frequency: 2.4GHz

INSTALLING THE TRANSMITTER BATTERIES


This transmitter requires 4 AA batteries.

1. Open the battery cover from the transmitter.
2. Install the batteries as shown.
3. Close the battery cover.


(Does not include the 4 AA batteries.)

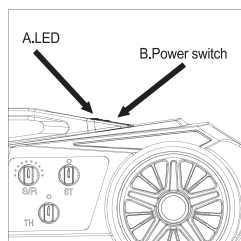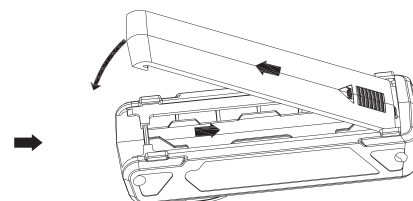


A.LED B.Power switch

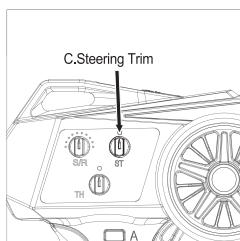


C.Steering Trim

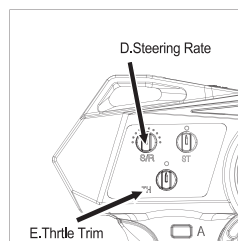


D.Steering Rate
E.Throttle Trim

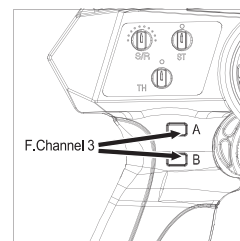


F.Channel 3

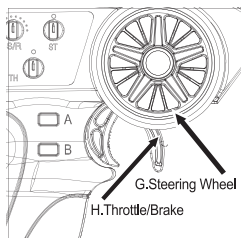


G.Steering Wheel
H.Throttle/Brake

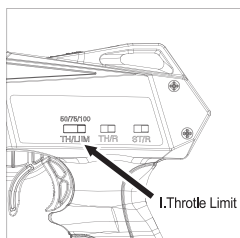

I.Throttle Limit

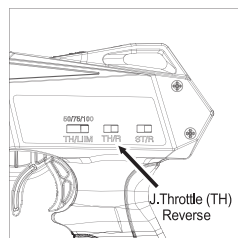

J.Throttle (TH) Reverse

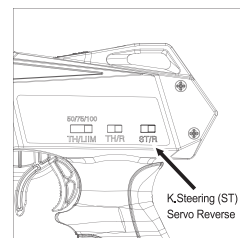

K.Steering (ST) Reverse

Model: BRX300

Weight: 6 grams

Type: FHSS 2.4GHz

Band: 2.4GHz


Antenna Length: 140mm

Voltage Range: 4.5- 10V

Channels: 3

Bind Type: Bind Plug

Dimensions (LxWxH): 33.5mm x 21.5mm x 12.5mm

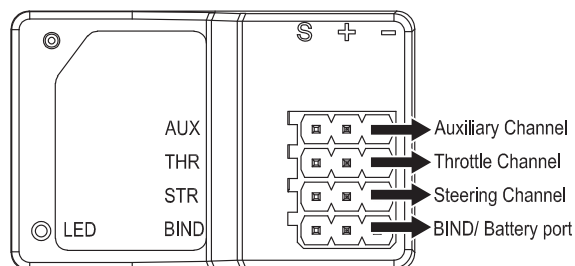

BRX300 BINDING

1. Insert the bind plug into the bind port on receiver.
2. Power on the receiver, the LED will flash rapidly to indicate it is in bind mode
3. Rotate the steer full to right and hold up, then power on the transmitter; the LED on the transmitter will flash, the LED on the receiver stops flashing and lights illuminated indicate that the binding procedure is completed.